


# Kindle 3 LCD Screen Replacement

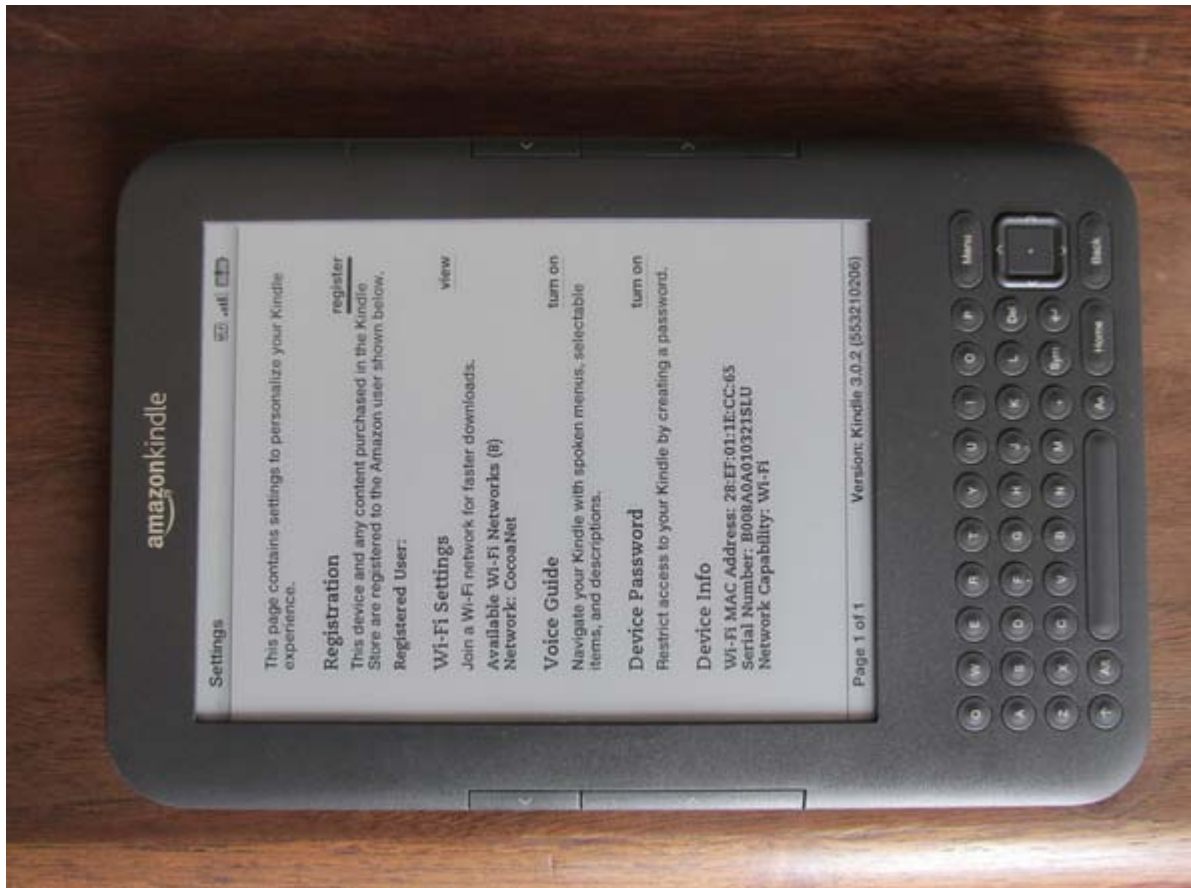

These instructions will show you how to open the Kindle 3 Tablet to replace the LCD screen and/or ther internal parts. Opening your Tablet will void your warrantee, and ConsoleParts4U does not accept any responsibility for broken consoles due to the installation process. You proceed at your own risk.



## Step 1 — Screen

- To remove the back cover, gently pry open the edge of the case with a small flat edged tool, beginning from a top corner, working your way towards the bottom in both directions.
- Remove the 6 silver screws, circled in red in Photo below.
- Remove the 11 black screws, circled in yellow in Photo below.
- Pop up the ribbon cable that connects the screen to the board.
- Gently lift out the board. The screen remains with the case.
- Replace the clearly broken screen with a good one.



## Step 2

- To reassemble your device, follow these instructions in reverse order.